


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar  
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件

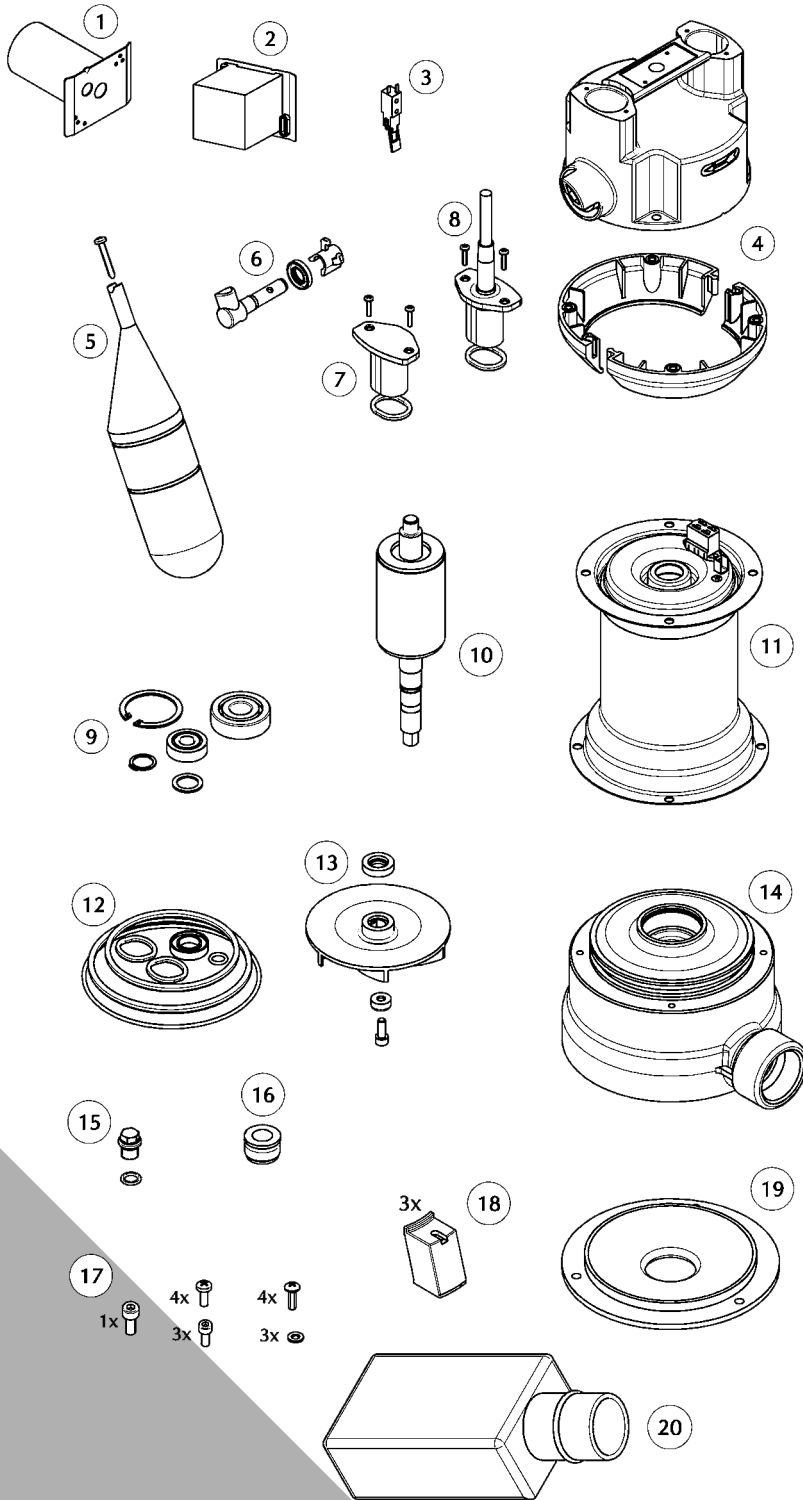

①	Kondensator 73 103 153	Capacitor	JP46015 JP46016 JP46017
②	Schalterschütz	Contacteur	JP46056
③	Mikroschalter ES DS	Microswitch	JP46351 JP46352
④	Haube ES, DS E, D	Top cover	JP46018 JP46019
⑤	Schwimmer	Float	JP46022
⑥	Schaltwelle HE, HES	Switch shaft	JP46020 JP46021
⑦	Schalterpatrone	Switch cartridge	JP46025
⑧	Leitung 73 E/ES, 103 E/ES 73 D/DS, 103 D/DS 73 HE, 103 HE 153 E/ES 153 D/DS with A/NZ plug ES	Cable	JP42777 JP42779 JP46980 JP46013 JP46014 JP47221
⑨	Lagersatz	Bearing set	JP46042
⑩	Rotorwelle 73 E, HE 73 D 103 E, HE 103 D 153 E 153 D	Rotor shaft	JP46035 JP46036 JP46037 JP46038 JP46039 JP46040
⑪	Stator + Gehäuse 73 E 73 D 73 HE 103 E 103 D 103 HE 153 E 153 D	Stator + Housing	JP46027 JP46028 JP46033 JP46029 JP46030 JP46034 JP46031 JP46032
⑫	Dichtungssatz	Seal set	JP46041
⑬	Lauf­rad 73 103 153 E 153 D	Impeller	JP46052 JP46053 JP46054 JP46055
⑭	Pumpengehäuse	Pump casing	JP46044
⑮	Ölschraube	Oil screw	JP46046
⑯	Gleitringdichtung	Mechanical seal	JP46043
⑰	Schraubensatz	Screw set	JP46263
⑱	Füße HE	Feet	JP46047 JP46049
⑲	Deckel	Cover	JP46050
⑳	Motorschutz 153 ES 153 DS	Motor protection Schuko-plug CEE-plug	JP40264 JP44750
㉑	1l Öl	1l Oil	JP48236